
## Sangtai

### Manual for Radio-Controlled Socket 51185X36+50074

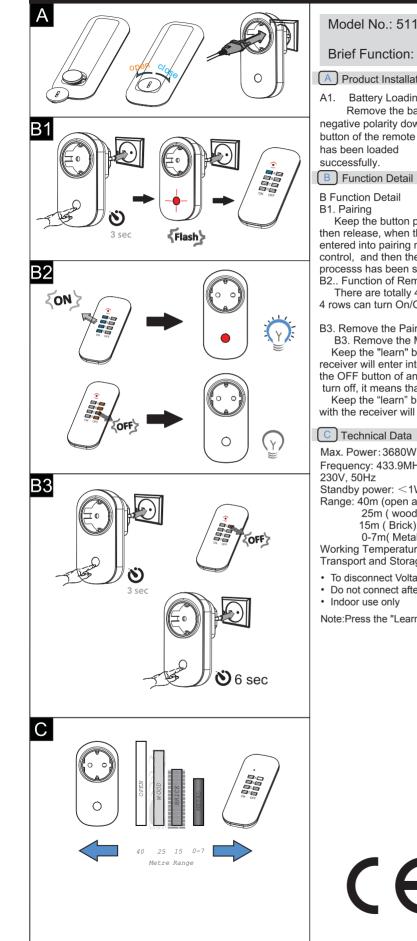

#### Model No.: 51185X36+50074

#### Brief Function: Remote-Controlled Set

#### A Product Installation/Uninstallation

#### Battery Loading/Unloading

Remove the battery cover and insert the battery into the battery cabinet with the negative polarity downward, and then screw up the battery cover. Briefly press any one button of the remote contol, the LED indicator will be on, then it means that the battery has been loaded

#### B Function Detail

#### **B** Function Detail

Keep the button pressed for more than 3 seconds(but less than 6 seconds) and then release, when the LED indicator starts blinking, it means that the receiver has entered into pairing mode; go on to press the ON button of any row of the remote control, and then the LED indicator truns constantly on, it means that the pairing processs has been successfully made.

B2.. Function of Remote Control

There are totally 4rows of On/Off buttons on the remote control. Each of the 4 rows can turn On/Off the devices paired with the row separately.

#### B3. Remove the Pairing Memory

B3. Remove the Momery

Keep the "learn" button pressed for more than 3 seconds and then release, the receiver will enter into the pairing mode with the LED indicator flashing slowly; Press the OFF button of any row of the remote, the indicator will be flashing quickly and then turn off, it means that the pairing memory of the row has been removed successfully. Keep the "learn" button pressed for more than 6 seconds, all the pairing memories

with the receiver will be removed.

#### ( C ) Technical Data

Frequency: 433.9MHz Standby power: <1W Range: 40m (open air); 25m ( wood); 15m (Brick); 0-7m(Metal) Working Temperature: 0°C---35°C

Transport and Storage Temperature: 0°C---35°C

- To disconnect Voltage pull the plug
- Do not connect after each other
- Indoor use only

Note:Press the "Learn" button to control the On/Off of the socket directly.



# Kangtai Electric CO.,LTD No.5,Kangtai Rd,Huanghua Industrial District,

Yueqing, Zhejiang, P.R. China