



AC current monitoring in 1-phase mains

Monitoring relays - ENYA series

Multifunction

1 change over contact

Width 17.5 mm

Installation design



Technical data

AC current monitoring in 1-phase mains with adjustable thresholds, adjustable hysteresis, adjustable tripping delay and the following functions which are selected by means of rotary switch:

Overcurrent monitoring **UNDER** Undercurrent monitoring

WIN Monitoring the window between Min and Max **OVER+Latch** Overcurrent monitoring with fault latch **UNDER+Latch** Undercurrent monitoring with fault latch Monitoring the window between WIN+Latch Min and Max with fault latch

2. Time ranges

Adjustment range

Start-up suppression time (Start): 0,1 to 10s

Tripping delay (Delay):

3. Indicators

Green LED ON/OFF: indication of supply voltage indication of failure of the Red LED ON/OFF: corresponding threshold

indication of tripping delay of the Red LED flashes: corresponding threshold

Yellow LED ON/OFF: indication of output relay

4. Mechanical design

Self extinguishing plastic housing, IP rating IP40 Mounted on DIN rail TS 35 according to EN 60715

Mounting position: any

Shockproof terminal connection according to VBG 4 (PZ1 required),

IP rating IP20

Tightening torque: max. 1Nm

Terminal capacity:

1 x 0.5 to 2.5mm² with/without multicore cable end

1 x 4mm² without multicore cable end

2 x 0.5 to 1.5mm² with/without multicore cable end

2 x 2.5mm² flexible without multicore cable end

5. Input circuit

230V AC Supply voltage: Terminals: Li-N

-15% to +15% of U Tolerance: Rated consumption: 5VA (0.8W) Rated frequency: AC 48 to 63Hz Duration of operation: 100% Reset time: 500ms Wave form: Sinus

Hold-up time: Drop-out voltage: >20% of rated voltage

III (in accordance with IEC 60664-1) Overvoltage category:

Rated surge voltage:

6. Output circuit

1 potential free change over contact 250V AC Rated voltage:

1250VA (5A / 250V AC) Switching capacity: 5A fast acting Fusing: Mechanical life: 20 x 106 operations Electrical life: 2 x 10⁵ operations at 1000VA resistive load

max. 6/min at 1000VA resistive load Switching frequency: (in accordance with IEC 60947-5-1) Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage: 4kV

7. Measuring circuit

Measuring variable: AC sinus, 48 to 63Hz

Measuring input: 10AAC Terminals: Li. Lk

Overload capacity: 13A (ex 10A - distance > 5mm)

Starting current:

100A 1s 3s 50A 3mW Input resistance:

Switching threshold U_s: see table ordering information or

printing on the unit

Hysteresis H: see table ordering information or

printing on the unit

Overvoltage category: III (in accordance with IEC 60664-1)

Rated surge voltage: 4kV

8. Accuracy

Base accuracy: ≤5% of nominal value Adjustment accuracy: ±5% of nominal value Repetition accuracy: ≤2% of nominal value

Voltage influence:

Temperature influence: ≤0.05% / °C

9 Ambient conditions

-25 to +55°C Ambient temperature:

(in accordance with IEC 60068-1)

Storage temperature: -25 to +70°C -25 to +70°C Transport temperature: Relative humidity: 15% to 85%

(in accordance with IEC 60721-3-3

Pollution degree: 2 (in accordance with IEC 60664-1)

10. Weight

Single packing:

Package of 10pcs: 655g per package

Functions

Overcurrent monitoring (OVER, OVER+Latch)


When the supply voltage U is applied, the output relay R switches into on-position, if the measured current is below the Max-value. When the measured current exceeds the Max-value, the output relay R switches into off-position after the interval of the tripping delay (Delay) has expired.

OVER

The output relay R switches into on-position again, if the current falls below the Min-value

OVER+Latch:

The output relay R switches only into on-position again by interrupting and re-applying of the supply voltage, provided that the measured current is below the Max-value.

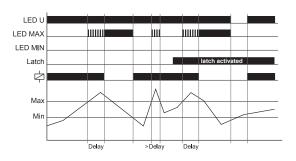

Window function (WIN, WIN+Latch)


When the supply voltage U is applied, the output relay R switches into on-position, if the measured current is within the adjusted window. When the measured current leaves the window between Min and Max, the output relay R switches into off-position after the interval of the tripping delay (Delay) has expired.

WIN:

The output relay R switches into on-position again, if the current re-enter the adjusted window.

WIN+Latch:

The output relay R switches only into on-position again by interrupting and re-applying of the supply voltage, provided that the measured current is within the threshold values.

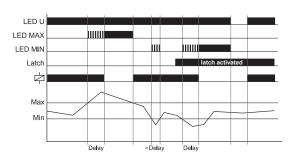

Untercurrent monitoring (UNDER, UNDER+Latch)


When the supply voltage U is applied, the output relay R switches into on-position, if the measured current is beyond the Min-value. When the measured current falls below the Min-value, the output relay R switches into off-position after the interval of the tripping delay (Delay) has expired.

UNDER:


The output relay R switches into on-position again, if the current exceeds the Max-value.

UNDER+Latch:


The output relay R switches only into on-position again by interrupting and re-applying of the supply voltage, provided that the measured current is beyond the Min-value.

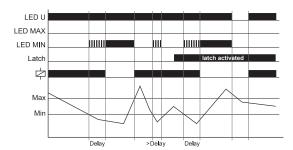

Connections

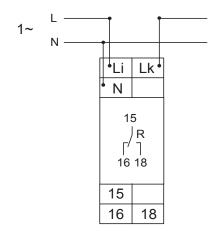

Dimensions

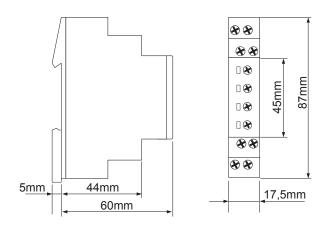

Ordering information

Туре	Rated voltage U _N	Functions	Switching thresholds I _s	Tripping delay (Delay)	Hysteresis	Art. No.
E1IM10AACL10 230V AC	230V AC	O, U, W, O+L, U+L, W+L	Max: 10% to 100% of I _N Min: 5% to 95% of I _N	0.1 of 10s	adjustable	1340200

